

P-Series Screw Pump Operation Manual

for P016, P017, and P-018-CPF, and Systems D



Contents

Overview	1
Introduction	1
Features and Parts Lists	2
Safety Instructions	4
General Cautions	4
Recommended test fluids	4
Recommended Mounting	4
Operating Instructions	5
Generating Pressure	5
Connecting the Auxiliary Reservoir	6
Connection Diagram	7
Crystal Reference Indicators	7
Specifications	8
Support	9
Troubleshooting	9
Maintenance	9
Fitting Kits and Spare Parts	10
Contact Us	11
Returning product to AMETEK	11
Warranty	11

Overview

INTRODUCTION

The P-Series hydraulic screw pump you have chosen, is an extremely effective pressure pump, and we are confident that it will live up to your expectations. Over the course of many years, we have acquired extensive knowledge of industrial precision pressure calibration. This expertise is reflected in our products, all of which are designed for daily use in an industrial environment. If you have any ideas or suggestions for ways we might improve our products, we would be very interested in hearing from you.

The P016, P017, and P-018-CPF hydraulic screw pumps are designed for easy, controlled, high pressure generation.

The screw pumps have a 4-connection manifold that can be used for the reference indicator, the device under test, a fine adjust, an isolation valve, or a fluid reservoir. The reference indicator mounted on the pump can easily be adjusted for the best viewing angle by using the banjo connector set. The CPF[♦] version includes [Crystal Pressure Fittings \(CPF\)](#), which allow users to produce leak-free seals without tools or thread tape. CPF fittings also include a self-venting weep hole to help assure a safe disconnection from a pressurized system.

[♦] U.S. Patent No. 8,794,677

The P-Series hydraulic screw pump may be ordered as part of a Pump System, complete with a JOFRA or Crystal Pressure Indicator. P-Series Pump Systems include the most commonly used pressure fittings, seals, etc. All packaged in a carrying case with custom insert.

► P-Series Pumps

	Pressure Range	Test Media	Media Specifics	Pump System
P016	350 bar / 5000 psi	Hydraulic Oil	Rando HDZ32	DOX
P017	350 bar / 5000 psi	Water	Distilled Water	DWX
P-018-CPF	350 bar / 5000 psi	Hydraulic Oil or Water	Rando HDZ32 or Distilled Water	DOX or DWX

FEATURES AND PARTS LISTS

Parts List for all pumps

Part Number	Description	Screw Pump		
		P016*	P017*	P-018-CPF**
60R955	1/4" BSP Male Removable Plugs	■	■	■ (4)
60R120	1/4" BSP Bonded Seals	N/A	N/A	■ (4)
MPF-1/4FPT	CPF Female to 1/4" NPT Female Adapter Fitting	N/A	N/A	■
MPM-1/4BSPM	CPF Male to 1/4" BSP Male Adapter Fittings	N/A	N/A	■ (2)
5254	1/4" BSP Female to 1/4" BSP Female Adapter Fittings	N/A	N/A	■
129341	1/4" BSPP Male to 1/4" BSPT Female	N/A	N/A	■
SPK-HPC-004	1/4" BSP Male to 1/4" BSP Male Banjo Connector	optional	optional	■
60P013	1/4" BSP Male Fine Adjust	optional	optional	■
60R135	Isolation Valve	optional	optional	■
65-R975	Auxiliary Fluid Reservoir (with Vent Valve Lid)	optional	optional	optional

* Pump is delivered full of test fluid; water or oil.

** Pump is delivered empty of test fluid; user must fill with water or oil.



Parts Included with Pump Systems for Crystal Reference Indicators

Part Number	Description	System D
		DOX and DWX
MPM-1/4BSPM	CPF Male to Screw Pump Adapter	■ (2)
5254	1/4" BSP Female to 1/4" BSP Female Fitting	■
MPF-1/4FPT	CPF Female to 1/4" NPT Female Fitting	■
MPF-1/4BSPF	CPF Female to 1/4" BSP Female Fitting	■
MPF-1/8MPT *	CPF Female to 1/8" NPT Male Fitting	■ (2)
MPF-CAP	CPF Female Cap Fitting	■
SPK-HPC-004	1/4" BSP Male to 1/4" BSP Male Banjo Connector	■
60R955	1/4" Male BSP Plugs	■ (4)
60R120	1/4" Bonded Seals	■ (5)
60P013	1/4" BSP Male Fine Adjust	■
1351 **	Test Leads; Red & Black, including clips	■
5249	Protective Vinyl Cap	■ (4)
60I104	Pack Tape (1 roll)	■
60R159	Allen Key	■
124004	Shoulder Strap	■
124301	Aluminum Carrying Case	■

* When a Pump System D is ordered for a 30 Series Calibrator, two (2) additional MPF-1/8MPT fittings are included.

** The 1351 Test Leads are included *only* with Pump Systems for the 30 Series Calibrator.

Note: The P016 and P017 do not include the isolation valve.

Carrying Case

Pump System D is delivered with an Aluminum Carrying Case.



Ordering a Pump System

Any P-Series Pump System may be ordered with or without a reference indicator. The table below provides an explanation of the Pump System ordering scheme when ordering a system without an indicator. For details on ordering the Pump Systems with an indicator, see the indicator datasheet.

Reference Indicator	Pump System
nVision NV-NONE	System D (P-018-CPF) . . . -DOX
30 Series IS30-NONE	System D (P-018-CPF) . . . -DWX
HPC40 Series . . . HPC40-NONE	
XP2i XP2i-NONE	
m1 M1-NONE	

▶ SAMPLE PART NUMBERS

NV-NONE-DOX System D pump system (for nVision) for use with oil.

IS30-NONE-DWX System D pump system (for 30 Series) for use with water.

5KPSIXP2i-DWX System D pump system for use with water, with an XP2i gauge (5000 psi).

Safety Instructions

Please follow the instructions and procedures described in this manual. They are designed so that you get the most out of your pressure system and avoid any personal injuries and/or damage to the system.

GENERAL CAUTIONS

- Avoid knocking, bumping or dropping the pressure system. This can cause permanent damage to the system and loss of accuracy.
- The pressure system must not be used for any purposes other than those described in this manual and for any application other than precision pressure calibration jobs.
- The pressure system should only be used by TRAINED PERSONNEL.
- None of our calibration systems are cleaned or prepared for OXYGEN MEDIUMS. DO NOT USE our systems for this purpose.
- Do not disconnect any parts from the system when pressurized.
- Do not connect any external pressure source to this system. This system is designed to test pressure measuring devices connected to the manifold only. Pressure from an external source can result in explosion of the fluid reservoir and possible personal injuries.
- The pressure inside the pump can be extremely high. Ensure that all pressure connections have been established correctly.
- For permanent installation, we recommend bolting/fixing the pump to a table or other fixed installation.

RECOMMENDED TEST FLUIDS

- P016 pumps must use hydraulic oil (Rando HDZ32 or similar).
- P017 pumps must use distilled water.
- P-018-CPF pumps may use either hydraulic oil or distilled water.

The fluid used must be compatible with the aluminum, brass, stainless steel, and Buna N wetted parts.

Note: The pump itself has a fluid volume of approximately 24 ml. The volume of the auxiliary fluid reservoir is 300 ml.

RECOMMENDED MOUNTING

- Fixed installation is recommended for regular, repetitive calibration and test routines. The P-Series pump can be permanently installed using the four m6 mounting holes in the pump's base. (Remove the four rubber feet to access the mounting holes.)

Note: If a fixed installation is not desired, the pump can be held in place by hand.

Operating Instructions

GENERATING PRESSURE

Follow these steps to use the pump.

- 1 Turn the spindle counterclockwise to the stop.
- 2 Loosen the adjustment screw and turn the banjo set to the desired position. Firmly tighten the screw.
- 3 Remove plugs using a 6mm Allen key, and fill with test fluid (if necessary).
- 4 Connect the optional pressure hose and other connection fittings, as needed.

CAUTION: USE BONDED SEALS only, for attachment of any part or object directly to the manifold. Tighten all connections firmly.

- 5 Turn the spindle until test fluid is evident at the top of the connection fittings.
- 6 Connect the reference indicator and the device under test. Tighten the threads firmly.

Note: If CPF fittings are used in your pressure system, remaining air can be purged through the weep hole, by applying 10 psi or less and loosening the CPF fitting closest to the pressure device about two and a half turns. Repeat this process for each pressure device in the pressure system which is connected to a CPF fitting.

- 7 Power on the reference indicator and the device under test.
- 8 Confirm there is no pressure in the system by removing the plug or by opening the isolation valve (if installed).
- 9 Zero the reference indicator and the device under test.
- 10 If the isolation valve is not installed, replace and tighten the removable plug. If the valve is installed, close it tightly.
- 11 Verify the system connections are tightened firmly and pressurize the system by turning the spindle clockwise until the approximate pressure is obtained.
- 12 Allow time for the adiabatic effect to stabilize.
- 13 Use the fine adjust knob, if installed, to obtain the exact calibration pressure.
- 14 After obtaining your readings, release pressure by turning the pump spindle counterclockwise until it stops.
- 15 Open the isolation valve, or remove the plug, to vent the system.

WARNING: The device under test and the reference instrument should only be removed when there is no pressure in the system.

Note: AMETEK Denmark's liability ceases if: Parts are replaced/repared using spare parts which are not identical to those recommended by the manufacturer or non-original parts are used in any way when operating the system. AMETEK Denmark's liability is restricted to errors, which originated from the factory.

CONNECTING THE AUXILIARY RESERVOIR

Use the optional auxiliary reservoir if additional test fluid is required to fill the pressure system.

Note: Use bonded seals.

1 Mount the isolation valve, auxiliary reservoir, and device under test per the example to the right.

2 Open the isolation valve.

3 Remove the lid of the reservoir by unscrewing the vent valve.

4 Fill the reservoir with desired media (hydraulic oil or distilled water).

5 Mount the reservoir lid and close the vent valve.

6 Turn the spindle clockwise to pressurize the system.

Note: If additional fluid is needed, use a second isolation valve under the device under test.

7 If installed, close the isolation valve under the device under test.

8 Remove the lid of the reservoir by unscrewing the vent valve.

9 Turn the spindle clockwise until it stops.

10 Turn the spindle counterclockwise until it stops to pull the fluid from the reservoir.

Note: Be ready to add fluid to the reservoir if necessary.


11 Mount the reservoir lid and close the vent valve.

12 Open the isolation valve under the device under test.


13 Turn the spindle clockwise to pressurize the system.

14 If you require additional test fluid, repeat steps 7-13.

15 When you are ready to vent the system, unscrew the vent valve. Any excess fluid will go back into the reservoir.

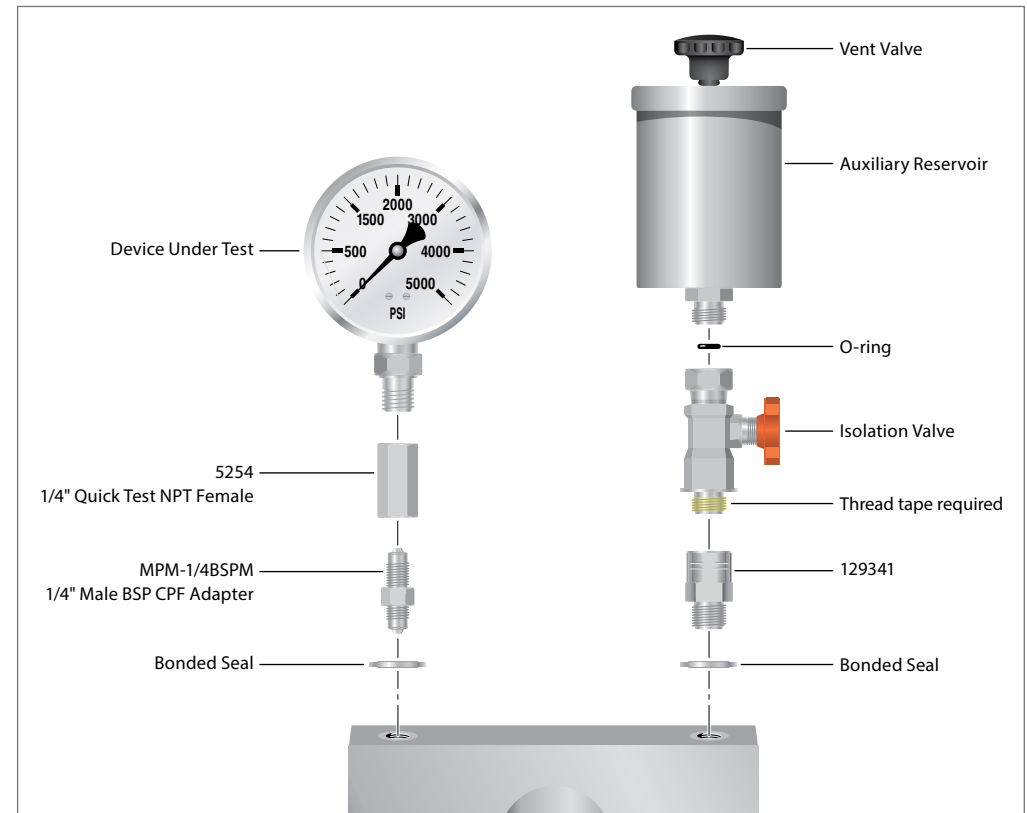

Connection Diagram

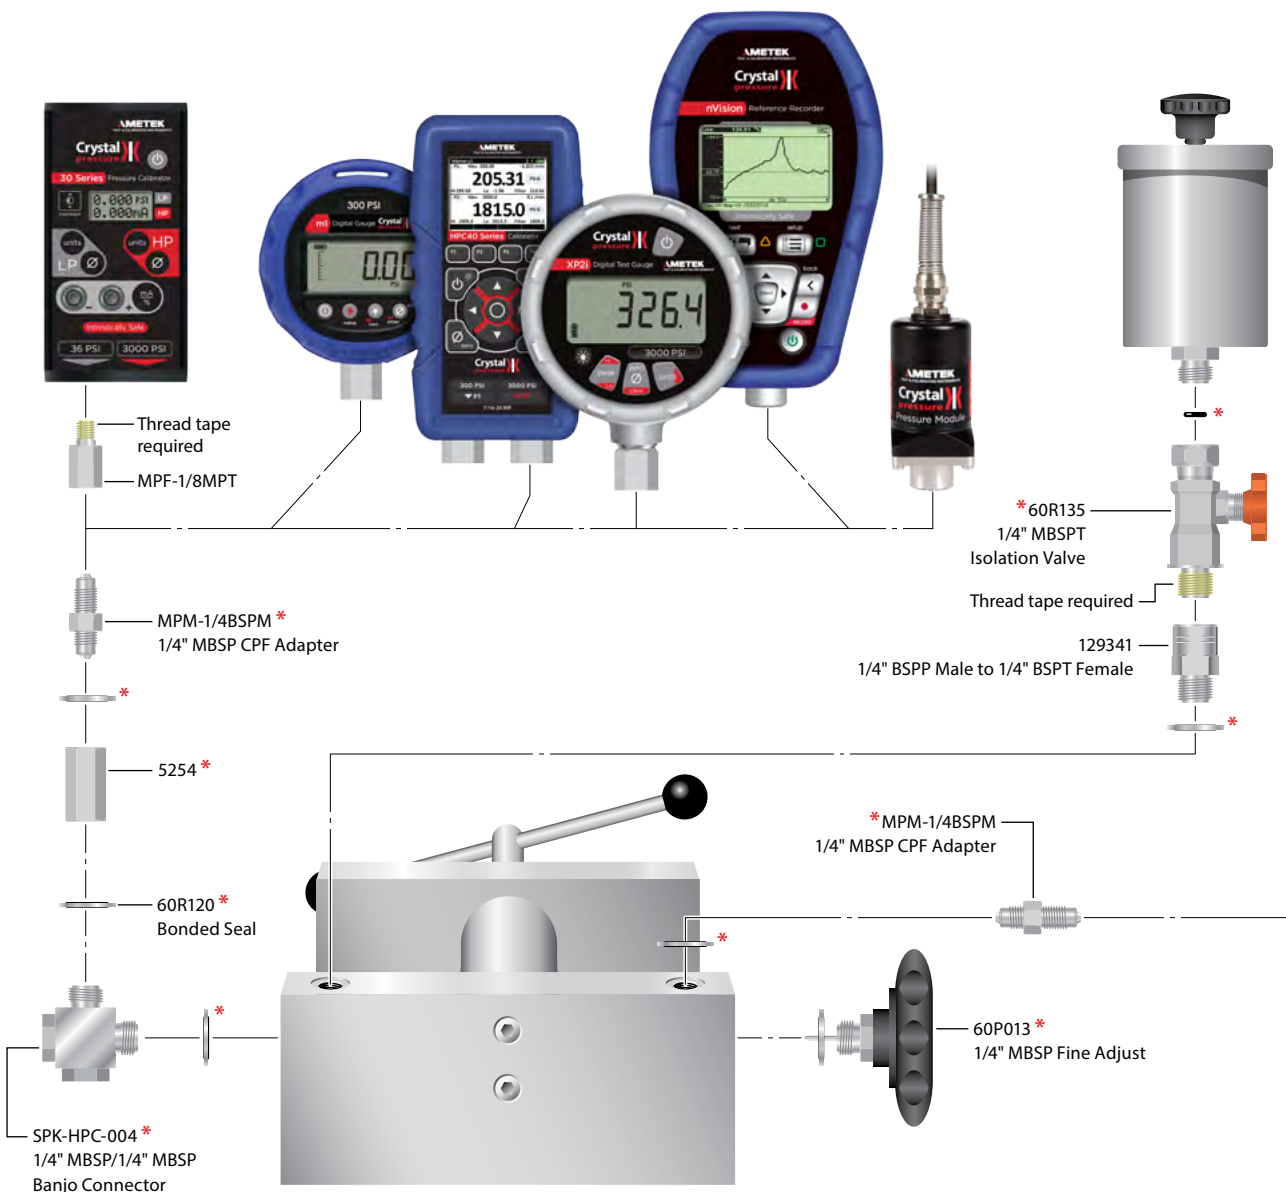

NPT MALE		
	MPF-1/8QTM	1/8" Quick Test NPT Male
	MPF-1/8MPT	1/8" NPT Male
	MPF-1/4QTM	1/4" Quick Test NPT Male
	MPF-1/4MPT	1/4" NPT Male
Additional NPT sizes available in non-CPF MP adapters		
NPT FEMALE		
	MPF-1/8QTF	1/8" Quick Test NPT Female
	MPF-1/4QTF	1/4" Quick Test NPT Female
	MPF-1/4FPT *	1/4" NPT Female
	MPF-1/2QTF	1/2" Quick Test NPT Female
Additional NPT sizes available in non-CPF MP adapters		
BSP		
	MPF-1/8BSPF	G 1/8" Female
	MPF-1/4BSPF	G 1/4" Female
	MPF-3/8BSPF	G 3/8" Female
	MPF-1/2BSPF	G 1/2" Female
	MPF-1/8QTFB	1/8" Quick Test Female
	MPF-1/4QTFB	1/4" Quick Test Female
	MPF-3/8QTFB	3/8" Quick Test Female
	MPF-1/2QTFB	1/2" Quick Test Female
TRANSMITTER		
	MPF-5/16TRM	for Foxboro, Rosemount, & Yokogawa
	MPF-1/4TRM	for Honeywell
TUBE		
	MPF-1/4TBM	1/4" Tube Male
	MPF-3/8TBM	3/8" Tube Male
	MPF-1/2TBM	1/2" Tube Male
CPF		
	MPF-MPF	Female to Female
	MPF-MPFTU	T-Union (Female)
	MPF-MPFBULK	Bulkhead (Female to Female)
	MPF-CAP	Cap
ADDITIONAL		
	MPF-M20QTF	M20 x 1.5 Quick Test Female
	MPF-M20X1.5F	M20 x 1.5 Female
	MPF-QCN	Quick-Connect Nut
	MPF-AN4M	AN4 Male

* These parts are included with the P-018-CPF pump. Additional parts are supplied as part of a pump system, or may be ordered separately.

Specifications

Pressure Ranges

P016, P017, and P-018-CPF 0 to 350 bar / 0 to 5000 psi

O-Ring Material

P016, P017, and P-018-CPF Buna N

Pressure Connections

▶ Reference Port

P016, P017 1/4" BSP Female

P-018-CPF Crystal CPF Male (1/4" BSP Female to CPF Male adapter)

▶ Adapter/Accessory Ports

P016, P017 3 x 1/4" BSP Female


P-018-CPF 2 x 1/4" BSP Female. Includes one MPM-1/4BSPM and one MPF-1/4FPT (1/4" Female NPT)

Dimensions

Pump 366 x 195 x 105 mm / 14.4 x 7.7 x 4.1 inch

Weight 3.7 kg / 8.2 lbs

Mounting Holes M6 x 4 places

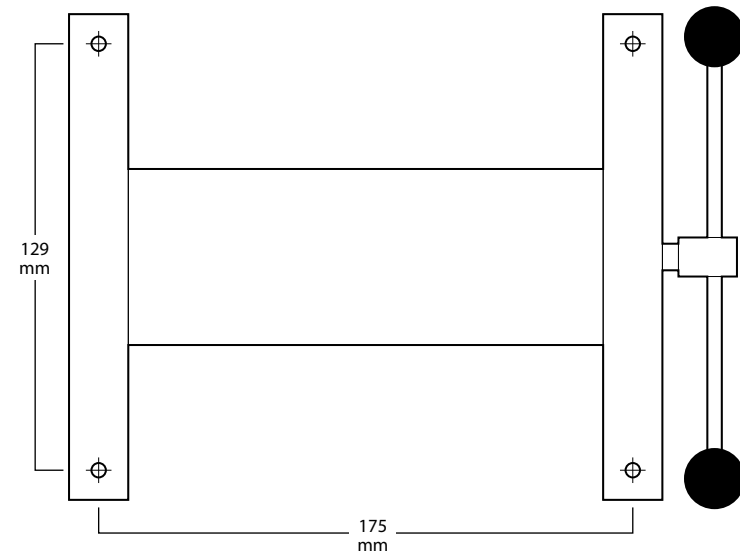

Support

TROUBLESHOOTING

Unstable Pressure

► **Problem:** Pressure cannot be generated correctly, or set pressure does not remain stable.

► **Solutions:**

- Check that all adapters and pressure fittings have been tightened sufficiently to eliminate leaks.
- Confirm test fluid does not contain air (air in the fluid can increase adiabatic effects). You may have to adjust the pressure a few times before the pressure is stable enough for calibration. Replace test fluid if necessary.
- Adiabatic and thermodynamic effects may be affecting the pressure reading. High pressure hydraulic systems are sensitive to temperature and movements. This effect will disappear after a period of time.

If the pressure is still not stabilizing, the system may be in need of service. Please contact your local distributor for advice.

Note: Always readjust the pressure after 5 to 10 minutes to allow time for settling of above effects.

MAINTENANCE

Users should/must carry out the following cleaning procedures when required:

Standard exterior cleaning Clean using a soft, damp cloth.

Heavily soiled cleaning The instrument may also be cleaned using isopropyl alcohol when heavily soiled.

FITTING KITS AND SPARE PARTS

Service Kits

► P016 / P017

P/N: 60P016For P016 pump.

P/N: 60P017For P017 pump.

► P-018-CPF

P/N: 60P016For P-018-CPF pump.

Hoses

► P016 / P017

P/N: 65P175Hose. 1.0 m, 1/4" BSP Female to 1/4" BSP Male connection.

P/N: 65P180Hose. 2.0 m, 1/4" BSP Female to 1/4" BSP Male connection.

P/N: 60I156Hose. 1.5 m, 1/4" BSP Female to 1/4" BSP Male connection.

P/N: 60I157Hose. 5.0 m, 1/4" BSP Female to 1/4" BSP Male connection.

► P-018-CPF (Requires MPF-MPF adapter fitting to connect)

P/N: MPH-1Hose. 1.0 m, CPF MP Male connection.

P/N: MPH-1.5Hose. 1.5 m, CPF MP Male connection.

P/N: MPH-3Hose. 3.0 m, CPF MP Male connection.

P/N: MPH-5Hose. 5.0 m, CPF MP Male connection.

Adapters, Fittings and Plugs

► P016 / P017

P/N: 65N000Adapter. Extension tube, 120mm (Max. 350 bar / 5000 psi)
1/4" BSP Female to 1/4" BSP Male

P/N: 50-REP 615Adapter. Quick connector set, Female 1/4" BSP to 1/4" BSP

P/N: SPK-HPC-004Adapter. Banjo connector set for pump

P/N: 11-90109Fitting. 1/4" BSP Male to 1/4" NPT Female

P/N: 60R955Plug. 1/4" BSP Male

► P-018-CPF

P/N: MPF-CAPCap. CPF Female.

P/N: 4013Quick Test CPF Kit. (MPF-1/8QTF, MPF-1/4QTF, and MPF-1/2QTF)

P/N: 4015BSP Test Kit. (MPF-1/8QTFB, MPF-1/4QTFB, MPF-3/8QTFB, MPF-1/2QTFB)

Seals

► P016, P017, and P-018-CPF

P/N: 101549Bonded seal. For 1/2" BSP adapter.

P/N: 60R120Bonded seal. For 1/4" BSP adapter.

P/N: 60R122Bonded seal. For 1/8" BSP adapter.

Accessories

► P016, P017, and P-018-CPF

P/N: 65-R975Auxiliary fluid reservoir. Includes vent valve lid.

P/N: 60R135Isolation valve.

P/N: 60P013Fine adjust knob

P/N: 60I104Teflon tape. 1 roll.

P/N: 60R159Allen Key. 6 mm.

CONTACT US

United Kingdom

Tel +44 (0)1243 833 302

jofra@ametek.co.uk

France

Tel +33 (0)1 30 68 89 40

general.lloyd-instruments@ametek.fr

Germany

Tel +49 (0)2159 9136 510

info.mct-de@ametek.de

Denmark

Tel +45 4816 8000

jofra@ametek.com

USA

Florida - Mansfield & Green

Tel +1 (800) 527 9999

cal.info@ametek.com

California - Crystal Engineering

Tel +1 (800) 444 1850

crystal@ametek.com

India

Tel +91 22 2836 4750

jofra@ametek.com

Singapore

Tel +65 6484 2388

jofra@ametek.com

China

Shanghai

Tel +86 21 5868 5111

Beijing

Tel +86 10 8526 2111

Guangzhou

Tel +86 20 8363 4768

jofra.sales@ametek.com.cn

RETURNING PRODUCT TO AMETEK

Please contact your sales representative to complete a Return Material Authorization (RMA) form and/or receive an RMA number.

Return/shipping instructions will be provided with the RMA number.

WARRANTY

This instrument is warranted against defects in workmanship, material and design for one (1) year from date of delivery to the extent that AMETEK will, at its sole option, repair or replace the instrument or any part thereof which is defective, provided, however, that this warranty shall not apply to instruments subjected to tampering or, abuse, or exposed to highly corrosive conditions.

THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES WHETHER EXPRESS OR IMPLIED AND AMETEK HEREBY DISCLAIMS ALL OTHER WARRANTIES, INCLUDING, WITHOUT LIMITATION, ANY WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE OR MERCHANTABILITY. AMETEK SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES, INCLUDING, BUT NOT LIMITED TO, ANY ANTICIPATED OR LOST PROFITS.

This warranty is voidable if the purchaser fails to follow any and all instructions, warnings or cautions in the instrument's Instruction Manual.

If a manufacturing defect is found, AMETEK will replace or repair the instrument or replace any defective part thereof without charge; however, AMETEK's obligation hereunder does not include the cost of transportation, which must be borne by the customer. AMETEK assumes no responsibility for damage in transit, and any claims for such damage should be presented to the carrier by the purchaser.



© 2022 AMETEK Incorporated
Gydevang 32, 3450 Allerød, Denmark 4816 8000