WIFI-21CFR-TP 21CFR Remote WiFi Temperature Sensor **External Thermistor**

- Can be installed as part of a 21CFR compliant system with additional controls including permission-based use, authority level sign-off and full system audit
- Thermistor probe temperature measurement range -40 to +125°C (-40 to +257°F)
- Wirelessly stream and view data on the FilesThruTheAir[™] 21CFR Cloud
- Easy sensor set-up using free 21CFR WiFi Sensor Software
- · Configurable high and low alarms with indicator

DEVICE SPECIFICATIONS

Operating temperature range Logging period (user configurable)

Transmission period (user configurable)

Temperature measurement resolution

Temperature measurement range

Temperature display resolution

Permission based use and access Authority based action sign-off

Complete system audit trail

Data records cannot be edited or deleted

Temperature accuracy

Dimensions

Battery life

USB supply voltage

The WIFI-21CFR-TP measures the temperature of the environment in which the probe is situated.

Data is streamed wirelessly over any compatible WiFi network to be viewed on the FilesThruTheAir[™] 21CFR Cloud. During configuration, the sensor will search for an existing wireless network whilst physically connected to the PC. It can then be placed anywhere within range of the network. If the sensor temporarily loses connectivity with the network, it will log readings until it is able to communicate again with the FilesThruTheAir[™] 21CFR Cloud (max 30 days at 10-second sample interval). The unit is freestanding, but it can be attached to a wall or surface using the bracket provided.

Maximum

5.5

+60 (+140)

12 hrs

24 hrs

+125 (+257)

±1.5/±3

(-40 to +125/

-40 to +257)

 \checkmark

 \checkmark

Unit

Months

Vdc

°C (°F)

°C (°F)

°C (°F)

°C/°F

The sensor is IEEE 802.11bgn (2.4GHz) compliant, supports WEP, WPA/WPA2 encryption and enterprise networks (PEAP, TTLS, FAST).

Minimum

4.5

-20 (-4)

10 sec

1 min

-40 (-40)

21CFR COMPLIANCE When used with a FilesThruTheAir[™] 21CFR Cloud subscription

For a detailed compliance checklist, please visit www.filesthrutheair.com/21cfr

Typical

>6

5

10 min

1 hr

0.1 (0.2)

0.1 $\pm 0.75/\pm 1.5$

(-15 to +70/ -5 to +158)

82 x 70 x 36mm (3.22 x 2.75 x 1.41")

ACCESSORIES

ACCESSORIES		
PSU-5VDC-USB-USA	USB Mains Power Adapter for USA	
PSU USB-UK	USB Mains Power Adapter for UK	
PSU USB-EU	USB Mains Power Adapter for EU	
WIFI-ALERT	Audible and Visual Alarm for WiFi Data Logging Sensors	

 
INCLUDED IN THE BOX

EL-WIFI WALL BRACKET	Wall mounting bracket for EL-WiFi sensors
EL-PROBE2-1.0M-TP	1m Thermistor Probe
CABLE USB A-MICRO B	USB Type A to Micro B



CALIBRATION CERTIFICATES NOW AVAILABLE

FilesThruTheAir™ now offers a Traceable Calibration Certificate Service on Temperature Data Loggers. Using reference equipment which has been calibrated by a UKAS/NIST accredited laboratory and using apparatus traceable to national or international standards. For more information please see www.filesthrutheair.com



31:





WIFI-21CFR-TP 21CFR Remote WiFi Temperature Sensor External Thermistor

21CFR WiFi Sensor Software

FilesThruTheAir's 21CFR WiFi software* is available as a free download from www.FilesThruTheAir.com. Easy to install and use, FilesThruTheAir™ 21CFR WiFi Sensor Software allows easy sensor set-up and connection of sensors to a WiFi network and the FilesThruTheAir™ 21CFR Cloud.



FilesThruTheAir[™] 21CFR Cloud

21CFR Cloud subscription delivers all of the flexibility of a remote monitoring system: Interact with sensors via any internetenabled device; manage and monitor sensors; access event logs and set up email alerts; assign authorisation levels to user accounts and view comprehensive audit trail records. Unlike the standard FilesThruTheAir Cloud service, 21CFR Cloud includes other controls such as permission-based use, authority sign-off and full system audit to ensure data monitored and collected is regulated to 21CFR Part 11 standard.



Authority sign-off on actions

A Cloud account subscription is created during the WiFi sensor set-up process using FilesThruTheAir[™] 21CFR WiFi Sensor Software. 21CFR WiFi Sensors are only compatible with the 21CFR Cloud (https://21cfr.wifisensorcloud.com)

Download the latest version of the software free of charge from www.FilesThruTheAir.com

Battery Life and Power Supply

The battery can be recharged (unit must be between 0 - 40 °C) via a PC, a USB +5V wall adapter, or a portable USB battery pack using the USB lead provided. It can also be permanently powered by a USB wall adapter or USB battery pack. Readings may be affected while the internal battery is being charged. However, once charged, continued connection of the charger will have no effect.

Battery life is dependent on: transmission period, WiFi encryption method, WiFi encryption key rotation frequency (determined by the router/access point), signal strength between router/access point and WiFi device, presence volume and type of WiFi traffic from other devices, sample rate and operating temperature.

Specifications liable to change without prior warning

*Requires Windows 7, 8.1, 10