




1
Remove seal • Enlevez le scellé • Entfernen der sicherungskappe • Rimovere la tenuta • Retirar junta

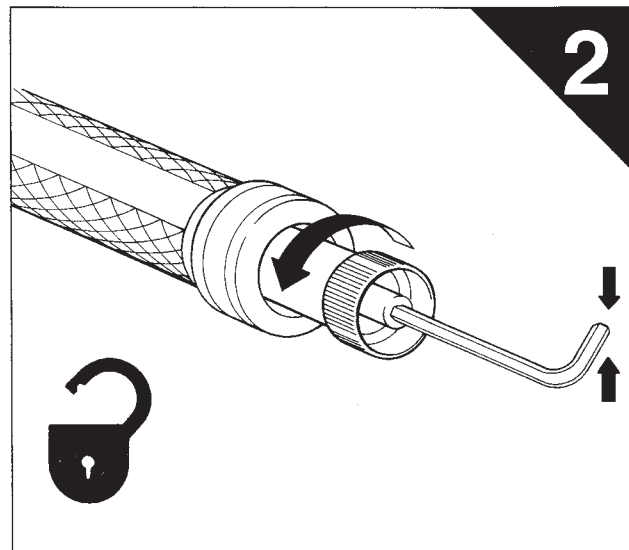


2
Unlock • Déverrouiller la mollette • Entsichern
Sbloccare • Desbloquear

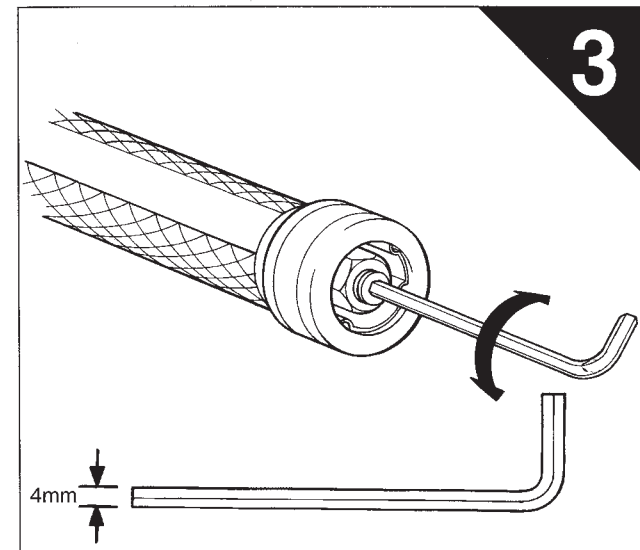


3
Adjust • Régler • Einstellen
Regolare • Adjustar

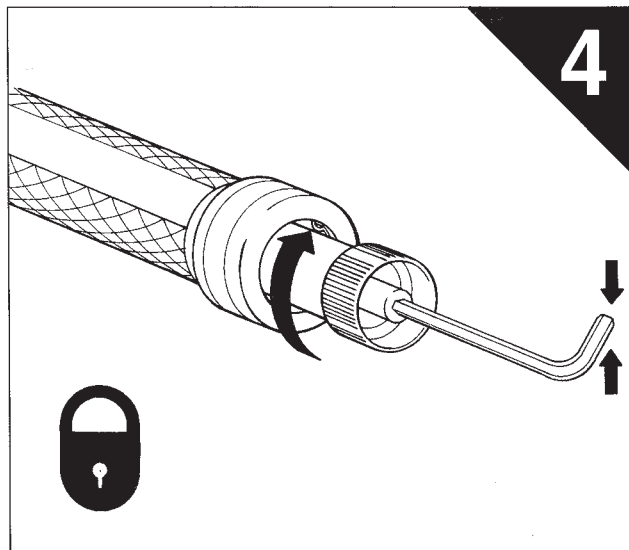

4
Lock • Verrouiller la molette • Sichern
Bloccare • Bloquear

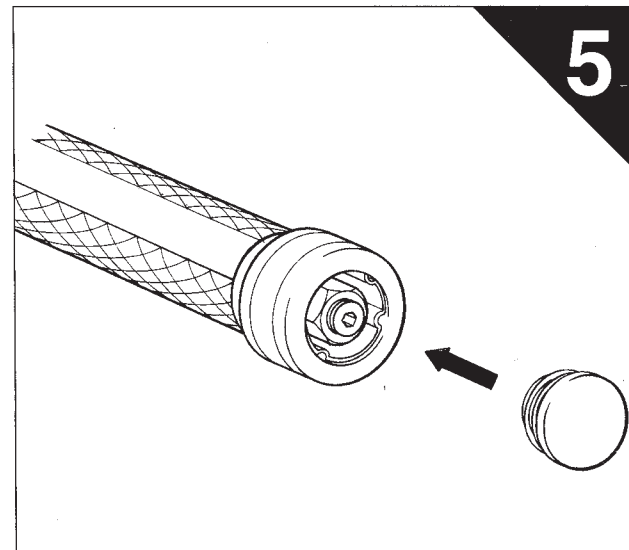

5
Fit new seal • Placez nouveau scellé • Einsetzen einer neuen sicherungskappe • Montare la nuova tenuta • Colocar la nueva junta

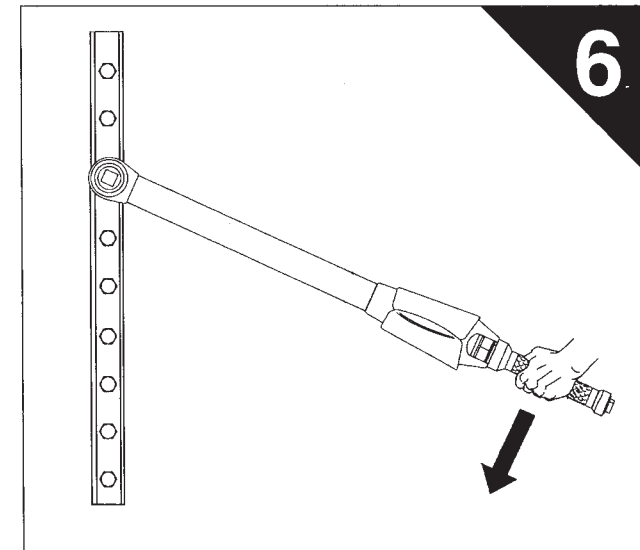

6
Apply Torque • Appliquer le couple • Drehmoment Anwendung
Applicare la coppia • Aplicar el par apriete